

USB DFU requires stable levels on PA10, PB5, PB11 & PC11. PB2 must be low during boot.

R12, R13, R20 & R21 provide stable input levels for DFU.

